

INSTALLATION INSTRUCTIONS FOR *CVC96 & *MVC96 TWO-STAGE GAS FURNACE (Type FSP CATEGORY IV Direct or Non Direct Vent Air Furnace)

These furnaces comply with requirements embodied in the American National Standard / National Standard of Canada ANSI Z21.47- CSA-2.3 Gas Fired Central Furnaces.



*Installer:
Affix all manuals
adjacent to the unit.*

As a professional installer you have an obligation to know the product better than the customer. This includes all safety precautions and related items.

Prior to actual installation, thoroughly familiarize yourself with this Instruction Manual. Pay special attention to all safety warnings. Often during installation or repair it is possible to place yourself in a position which is more hazardous than when the unit is in operation.

Remember, it is your responsibility to install the product safely and to know it well enough to be able to instruct a customer in its safe use.

Safety is a matter of common sense...a matter of thinking before acting. Most dealers have a list of specific good safety practices...follow them.

The precautions listed in this Installation Manual are intended as supplemental to existing practices. However, if there is a direct conflict between existing practices and the content of this manual, the precautions listed here take precedence.



**RECOGNIZE THIS SYMBOL
AS A SAFETY PRECAUTION.**

*NOTE: Please contact your distributor or our website for the applicable Specification Sheet referred to in this manual.

TABLE OF CONTENTS

Safety Considerations.....	3
SHIPPING INSPECTION	4
ELECTROSTATIC DISCHARGE (ESD) PRECAUTIONS	4
TO THE INSTALLER	5
Product Description.....	5
FEATURES	5
Product Application.....	5
Location Requirements & Considerations.....	6
EXISTING FURNACE REMOVAL	8
THERMOSTAT LOCATION	8
Combustion & Ventilation Air Requirements.....	8
Installation Positions.....	9
Horizontal Applications & Considerations.....	9
FURNACE SUSPENSION	9
FRONT COVER PRESSURE SWITCH TUBE LOCATION	9
DRAIN TRAP AND LINES	9
LEVELING	9
ALTERNATE VENT/FLUE AND COMBUSTION AIR CONNECTIONS	9
ALTERNATE ELECTRICAL AND GAS LINE CONNECTIONS	10
DRAIN PAN	10
FREEZE PROTECTION	10
Propane Gas/High Altitude Installations.....	10
Vent/Flue Pipe & Combustion Air Pipe.....	11
DUAL CERTIFICATION: NON-DIRECT/DIRECT VENT	11
MATERIALS AND JOINING METHODS	11
PROPER VENT/FLUE AND COMBUSTION AIR PIPING PRACTICES	11
TERMINATION LOCATIONS	12
SPECIAL VENTING REQUIREMENTS FOR INSTALLATIONS IN CANADA	13
STANDARD FURNACE CONNECTIONS	13
VENT/FLUE PIPE	13
COMBUSTION AIR PIPE	14
NON-DIRECT VENT INSTALLATIONS	14
NON-DIRECT VENT (SINGLE PIPE) PIPING	15
VENT/FLUE PIPE TERMINATIONS	17
VENT & COMBUSTION AIR INTAKE MEASUREMENTS FOR STANDARD	
HORIZONTAL TERMINATIONS (DUAL PIPE)	18
VENT/INTAKE TERMINATIONS FOR INSTALLATION OF MULTIPLE DIRECT VENT	
FURNACES	18
CONCENTRIC VENT TERMINATION	18
SIDE WALL VENT KIT	18
Condensate Drain Lines & Drain Trap	19
GENERAL DRAIN INFORMATION	19
FIELD SUPPLIED DRAIN	19
UPFLOW MODEL INSTALLED VERTICALLY	19
DRAIN EXITING LEFT SIDE	20
UPFLOW MODEL INSTALLED HORIZONTALLY WITH RIGHT SIDE DOWN	20
UPFLOW MODEL INSTALLED HORIZONTALLY WITH LEFT SIDE DOWN	21
UPFLOW MODEL INSTALLED HORIZONTALLY WITH LEFT SIDE DOWN -	
ALTERNATE	21
COUNTERFLOW MODEL INSTALLED VERTICALLY	22



DRAIN EXITING LEFT SIDE	22	Normal Sequence of Operation.....	46
DRAIN EXITING RIGHT SIDE	22	POWER UP	46
COUNTERFLOW MODEL INSTALLED HORIZONTALLY		HEATING MODE	46
WITH RIGHT SIDE DOWN	22	COOLING MODE	47
COUNTERFLOW MODEL INSTALLED HORIZONTALLY		FAN ONLY MODE	47
WITH LEFT SIDE DOWN	23	Operational Checks.....	47
Electrical Connections.....	23	Safety Circuit Description.....	47
Wiring Harness.....	24	INTEGRATED CONTROL MODULE	47
115 VOLT LINE CONNECTIONS	24	PRIMARY LIMIT	47
JUNCTION BOX RELOCATION	24	AUXILIARY LIMIT	47
24 VOLT THERMOSTAT WIRING	24	ROLLOUT LIMIT	47
SINGLE-STAGE HEATING THERMOSTAT APPLICATION	25	PRESSURE SWITCHES	47
24 VOLT DEHUMIDISTAT WIRING	25	FLAME SENSOR	48
FOSSIL FUEL APPLICATIONS	26	Troubleshooting.....	48
115 VOLT LINE CONNECTION OF ACCESSORIES (HUMIDIFIER AND		ELECTROSTATIC DISCHARGE (ESD) PRECAUTIONS	48
ELECTRONIC AIR CLEANER)	26	DIAGNOSTIC CHART	48
AUXILIARY ALARM SWITCH:	27	RESETTING FROM LOCKOUT	48
Gas Supply and Piping.....	27	Maintenance.....	48
HIGH ALTITUDE DERATE	27	ANNUAL INSPECTION	48
PROPANE GAS CONVERSION	28	FILTERS	49
GAS PIPING CONNECTIONS	28	BURNERS	49
PROPANE GAS TANKS AND PIPING	30	INDUCED DRAFT AND CIRCULATOR BLOWERS	49
Circulating Air & Filters.....	31	CONDENSATE TRAP AND DRAIN SYSTEM (QUALIFIED SERVICER ONLY)	49
DUCT WORK - AIR FLOW	31	FLAME SENSOR (QUALIFIED SERVICER ONLY)	49
CHECKING DUCT STATIC	31	FLUE PASSAGES (QUALIFIED SERVICER ONLY)	49
BOTTOM RETURN AIR OPENING [UPFLOW MODELS]	31	Before Leaving an Installation.....	49
FILTERS - READ THIS SECTION BEFORE INSTALLING THE RETURN AIR		Repair and Replacement Parts.....	49
DUCT WORK	32	Dip Switches.....	50
UPRIGHT INSTALLATIONS	32	Status Codes.....	51
HORIZONTAL INSTALLATIONS	34	Troubleshooting Chart.....	52
Startup Procedure & Adjustment.....	34	Wiring Diagram.....	57
DRAIN TRAP PRIMING	34	Special Instructions for Products Installed	
FURNACE OPERATION	34	in the State of Massachusetts.....	58
GAS SUPPLY PRESSURE MEASUREMENT	34		
GAS MANIFOLD PRESSURE MEASUREMENT AND ADJUSTMENT	36		
GAS INPUT RATE MEASUREMENT (NATURAL GAS ONLY)	37		
TEMPERATURE RISE	37		
CIRCULATOR BLOWER SPEEDS	37		
BLOWER HEAT OFF DELAY TIMINGS	40		
ComfortNet™ System.....	40		
OVERVIEW	40		
AIRFLOW CONSIDERATION	41		
FOSSIL FUEL APPLICATIONS	41		
CTK0* WIRING	41		
COMFORTNET SYSTEM ADVANCED FEATURES	42		
FURNACE ADVANCED FEATURES MENUS	43		
THERMOSTAT MENU	45		
DIAGNOSTICS	45		
NETWORK TROUBLESHOOTING	45		
SYSTEM TROUBLESHOOTING	46		
FAULT RECALL SEQUENCE	46		
FAULT CLEAR SEQUENCE	46		

 **WARNING**

GOODMAN WILL NOT BE RESPONSIBLE FOR ANY INJURY OR PROPERTY DAMAGE ARISING FROM IMPROPER SERVICE OR SERVICE PROCEDURES. IF YOU INSTALL OR PERFORM SERVICE ON THIS UNIT, YOU ASSUME RESPONSIBILITY FOR ANY PERSONAL INJURY OR PROPERTY DAMAGE WHICH MAY RESULT. MANY JURISDICTIONS REQUIRE A LICENSE TO INSTALL OR SERVICE HEATING AND AIR CONDITIONING EQUIPMENT.

115 VOLT LINE CONNECTIONS

Before proceeding with electrical connections, ensure that the supply voltage, frequency, and phase correspond to that specified on the unit rating plate. Power supply to the furnace must be NEC Class 1, and must comply with all applicable codes. The furnace must be electrically grounded in accordance with local codes or, in their absence, with the latest edition of The National Electric Code, ANSI NFPA 70 and/or The Canadian Electric Code CSA C22.1.

Use a separate fused branch electrical circuit containing properly sized wire, and fuse or circuit breaker. The fuse or circuit breaker must be sized in accordance with the maximum overcurrent protection specified on the unit rating plate. An electrical disconnect must be provided at the furnace location.

Connect hot, neutral, and ground wires as shown in the wiring diagram located on the unit's blower door. For direct vent applications, the cabinet opening to the junction box must be sealed air tight using either an UL approved bushing such as Heyco Liquid Tight or by applying non-reactive UL approved sealant to bushing.

Line polarity must be observed when making field connections. Line voltage connections can be made through either the right or left side panel. The furnace is shipped configured for a left side (right side for counterflows) electrical connection with the junction box located inside the burner compartment. To make electrical connections through the opposite side of the furnace, the junction box must be relocated to the other side of the burner compartment prior to making electrical connections. To relocate the junction box, follow the steps shown below.

NOTE: Wire routing must not to interfere with circulator blower operation, filter removal, or routine maintenance.

JUNCTION BOX RELOCATION

**WARNING**

EDGES OF SHEET METAL HOLES MAY BE SHARP. USE GLOVES AS A PRECAUTION WHEN REMOVING HOLE PLUGS.

**WARNING**

TO PREVENT PERSONAL INJURY OR DEATH DUE TO ELECTRIC SHOCK, DISCONNECT ELECTRICAL POWER BEFORE INSTALLING OR SERVICING THIS UNIT.

Line voltage connections can be made through either the right or left side panel. The furnace is shipped configured for a left side electrical connection. To make electrical connections through the opposite side of the furnace, the junction box must be relocated to the right side prior to making electrical connections. To relocate the junction box, perform the following steps.

1. Remove the burner compartment door.
2. Remove and save the two screws securing the junction box to the side panel.
3. Relocate junction box and associated plugs and grommets to opposite side panel. Secure with screws removed in step 2.

To ensure proper unit grounding, the ground wire should run from the furnace ground screw located inside the furnace junction box all the way back to the electrical panel. **NOTE:** Do not use gas piping as an electrical ground. To confirm proper unit grounding, turn off the electrical power and perform the following check.

1. Measure resistance between the neutral (white) connection and one of the burners.
2. Resistance should measure 10 ohms or less.

This furnace is equipped with a blower door interlock switch which interrupts unit voltage when the blower door is opened for servicing. Do not defeat this switch.

24 VOLT THERMOSTAT WIRING


As a two-stage non-communicating furnace, the furnace integrated control module provides terminals for both "W1" and "W2", and "Y1" and "Y2" thermostat connections. This allows the furnace to support the following system applications: 'Two-Stage Heating Only', 'Two-Stage Heating with Single Stage Cooling', and 'Two-Stage Heating with Two-Stage Cooling'. Refer to the following figures for proper connections to the integrated control module.

Low voltage connections can be made through either the right or left side panel. Thermostat wiring entrance holes are located in the blower compartment. The following figure shows connections for a "heat/cool system".

This furnace is equipped with a 40 VA transformer to facilitate use with most cooling equipment. Consult the wiring diagram, located on the blower compartment door, for further details of 115 Volt and 24 Volt wiring.

NOTE: For single stage cooling applications, a jumper may be required between Y1 and Y2 at the furnace control in order to achieve the desired single stage cooling airflow. Use of ramping profiles and dehumidification features require a jumper between Y1 and O.


NOTE: Thermostat "R" required if outdoor unit is equipped with a Comfort Alert™ module or if the outdoor unit is a part of the ComfortNet™ family of equipment AND is wired as a non-communicating system.

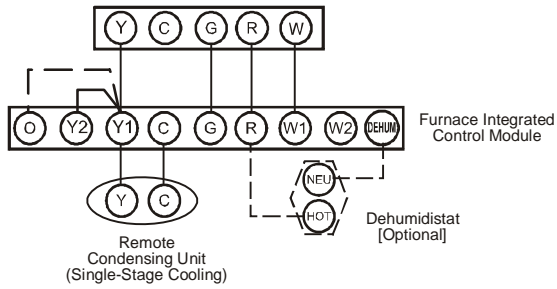

NOTE: To apply a single stage Heating Thermostat, the thermostat selector switch on the Integrated Control Module must be set on single-Stage.


Thermostat-Single-Stage Heating with Single-Stage Cooling

Figure 30

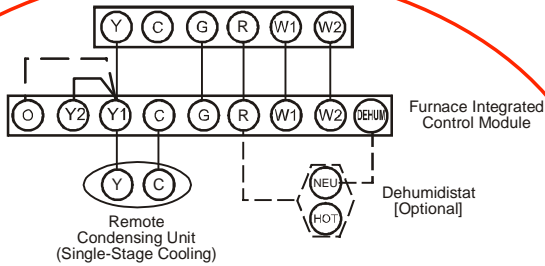

Thermostat - Two-Stage Heating with Single-Stage Cooling

Figure 31

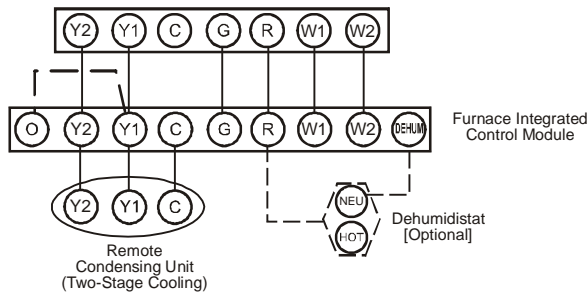

Thermostat - Two-Stage Heating with Two-Stage Cooling
Thermostat Wiring Diagrams

Figure 32

SINGLE-STAGE HEATING THERMOSTAT APPLICATION

A single-stage thermostat with only one heating stage may be used to control this furnace. The application of a single-stage thermostat offers a *timed* transition from low to high fire. The furnace will run on low stage for a fixed period of time before stepping up to high stage to satisfy the thermostat's call for heat. The delay period prior to step-

ping up can be set at either a fixed 5 minute time delay or a load based variable time between 1 and 12 minutes (AUTO mode). If the AUTO mode is selected, the control averages the cycle times of the previous three cycles and uses the average to determine the time to transition from low stage to high stage.

To use a single-stage thermostat, turn off power to the furnace, move the thermostat selection DIP switch to the OFF position. Set the desired transition time by setting the transition delay DIP switch to the desired ON/OFF position. Turn power back on. Refer to the following figure.

24 VOLT DEHUMIDISTAT WIRING

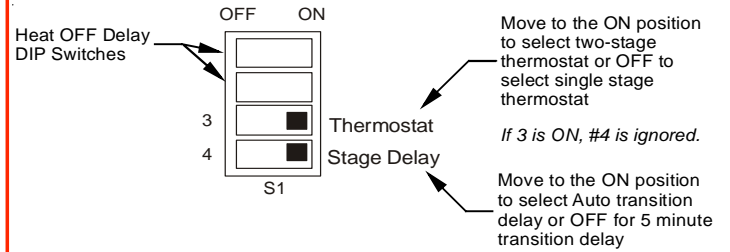


Figure 33

The optional usage of a dehumidistat allows the furnace's circulator blower to operate at a slightly lower speed (85% of desired speed) during a combined thermostat call for cooling and dehumidistat call for dehumidification. This can be done through an independent dehumidistat or through a thermostat's DEHUM terminal (if available). This lower blower speed enhances dehumidification of the conditioned air as it passes through the AC coil. For proper function, a dehumidistat applied to this furnace must operate on 24 VAC and utilize a switch which *opens on humidity rise*. Refer to the "Thermostat Wiring Diagrams" figure for additional wiring details. (See Figure 33)

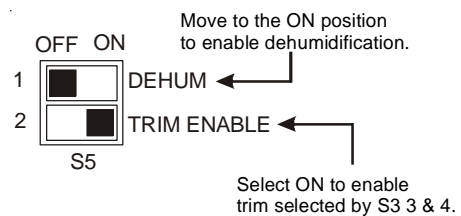


Figure 34

To install/connect a dehumidistat:

1. Turn OFF power to furnace.
2. To enable the dehumidify function on the integrated control module, set the dehumidification ENABLE dip switch from OFF to ON.
3. Secure the dehumidistat neutral wire (typically the white lead) to the terminal marked "DEHUM" on the furnace integrated control module.
4. Secure the dehumidistat hot wire (typically the black lead) to the terminal marked "R" on the furnace integrated control module.

5. Secure the dehumidistat ground wire (typically the green lead) to the ground screw on the furnace junction box.
NOTE: Ground wire may not be present on all dehumidistats.
6. Turn ON power to furnace.

Once the switch is set, the dehumidify function is enabled during a *combination* call for cooling (T-Stat) and dehumidification (DEHUM-Stat).


FOSSIL FUEL APPLICATIONS

This furnace can be used in conjunction with a heat pump in a fossil fuel application. A fossil fuel application refers to a combined gas furnace and heat pump installation which uses an outdoor temperature sensor to determine the most cost efficient means of heating (heat pump or gas furnace).


A heat pump thermostat with *three stages of heat* is required to properly use a two-stage furnace in conjunction with a heat pump. Refer to the fossil fuel kit installation instructions for additional thermostat requirements.

Strictly follow the wiring guidelines in the fossil fuel kit installation instructions. All furnace connections must be made to the furnace two-stage integrated control module and the "FURNACE" terminal strip on the fossil fuel control board.

115 VOLT LINE CONNECTION OF ACCESSORIES (HUMIDIFIER AND ELECTRONIC AIR CLEANER)




WARNING



HIGH VOLTAGE !

TO AVOID PERSONAL INJURY OR DEATH DUE TO ELECTRICAL SHOCK, DISCONNECT ELECTRICAL POWER BEFORE SERVICING OR CHANGING ANY ELECTRICAL WIRING.

Humidifier	1.0 Amp maximum at 120 VAC
Electronic Air Cleaner	1.0 Amp maximum at 120 VAC

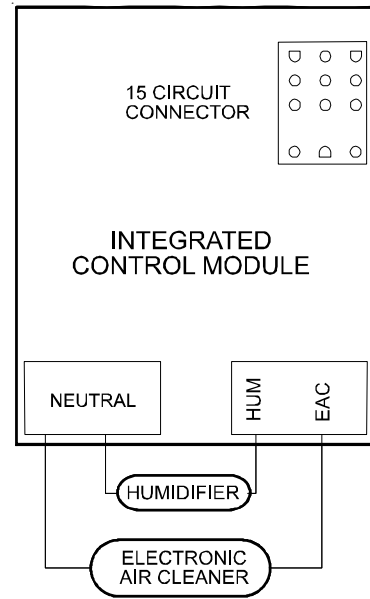

OPTIONAL ACCESSORIES

Accessories Wiring
Figure 35

The furnace integrated control module is equipped with line voltage accessory terminals for controlling power to an optional field-supplied humidifier and/or electronic air cleaner.

The accessory load specifications are as follows:

Turn OFF power to the furnace before installing any accessories. Follow the humidifier or air cleaner manufacturers' instructions for locating, mounting, grounding, and controlling these accessories. Accessory wiring connections are to be made through the 1/4" quick connect terminals provided on the furnace integrated control module. The humidifier and electronic air cleaner hot terminals are identified as HUM and EAC. The humidifier and electronic air cleaner neutral terminals are identified as NEUTRAL. All field wiring must conform to applicable codes. Connections should be made as shown. (See Figure 34)

If it is necessary for the installer to supply additional line voltage wiring to the inside of the furnace, the wiring must conform to all local codes, and have a minimum temperature rating of 105°C. All line voltage wire splices must be made inside the furnace junction box.

The integrated control module single humidifier terminal (HUM) is energized with 115 volts whenever the induced draft blower is energized. This terminal can also be used to provide 115 volt power to a humidifier transformer. The remaining primary transformer wire would be connected to the Line N on the control board. The integrated control module electronic air cleaner terminals (EAC) are energized with 115 volts whenever the circulator blower is energized.

In addition, the control is equipped with a dedicated humidification relay which is available through 1/4 inch terminals